



## RT Box LaunchPad Interface

**User Manual** June 2023



### **How to Contact Plexim:**

☎	+41 44 533 51 00	Phone
	+41 44 533 51 01	Fax
✉	Plexim GmbH Technoparkstrasse 1 8005 Zurich Switzerland	Mail
@	info@plexim.com	Email
	<a href="http://www.plexim.com">http://www.plexim.com</a>	Web

### **Revision History:**

HW rev. 1.0	First release
-------------	---------------

*RT Box LaunchPad Interface*

© 2023 by Plexim GmbH

PLECS is a registered trademark of Plexim GmbH. Other product or brand names are trademarks or registered trademarks of their respective holders.

# Contents

<b>Contents</b>	<b>iii</b>
<b>1 Introduction</b>	<b>1</b>
<b>2 Interface Board Overview</b>	<b>3</b>
LaunchPad Headers . . . . .	5
Onboard Voltage Supply . . . . .	6
Analog Output . . . . .	7
Digital I/O . . . . .	7
Connectors . . . . .	8
<b>3 Appendix</b>	<b>9</b>
LAUNCHXL-F280039C Pin Map . . . . .	10
LAUNCHXL-F280049C Pin Map . . . . .	13
LAUNCHXL-F28069M Pin Map . . . . .	16
LAUNCHXL-F28377S Pin Map . . . . .	19
LAUNCHXL-F28379D Pin Map . . . . .	22
LAUNCHXL-F28027 Pin Map . . . . .	25



# Introduction

The PLECS RT Box is a powerful real-time simulator based on a Xilinx Zynq system on a chip (SOC). With its digital and analog I/O signals, the RT Box is well-equipped for hardware-in-the-loop (HIL) testing as well as rapid control prototyping (RCP).

If employed for HIL testing, the RT Box typically emulates the power stage of a power electronic system. The power stage could be a simple DC/DC converter, an AC drive system or a complex multi-level inverter system. The device under test (DUT) is the control hardware connected to the RT Box. In such a setup, the complete controller can be tested without the real power stage.

To simplify the connection of external hardware and to provide convenient access to the RT Box inputs and outputs, Plexim offers a set of RT Box accessories.

The **RT Box LaunchPad Interface** described in this document facilitates a simple connection of the RT Box with the LaunchPad or LaunchPad XL development kits from Texas Instruments. It enables the user to test control algorithms implemented on TI C2000 MCUs without developing their own interface hardware. The pinout of the LaunchPad Interface board has been optimized for the following **TI C2000 LaunchPad** boards:


- LaunchXL-F280039C
- LaunchXL-F280049C
- LaunchXL-F28069M
- LaunchXL-F28377S
- LaunchXL-F28379D
- LaunchXL-F28027

The LaunchPad Interface can also be used with other LaunchPad boards not listed above, provided that the board physically aligns and connects with the

header pins. Users will need to create their own pin assignment table, similar to the ones shown in Section 3.

## Interface Board Overview

The LaunchPad Interface board facilitates the connection between a TI C2000 LaunchPad and the RT Box. Fig. 2.1 shows the top view of the board without any MCU boards attached.

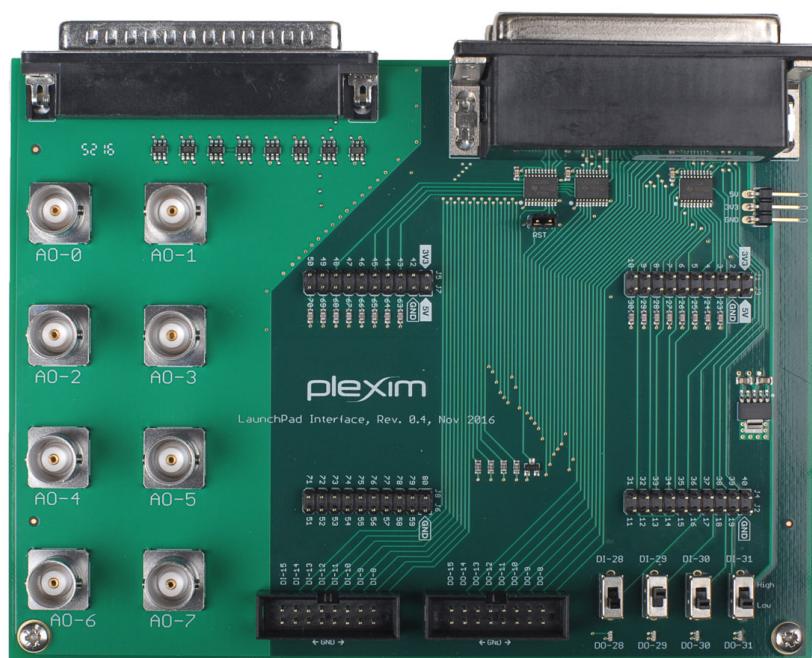


**Figure 2.1: Top view of RT Box LaunchPad Interface**

Additionally, the board provides access to some of the analog outputs of the RT Box via BNC connectors, and to unused digital input and output signals

via shrouded pin headers. For simple status communication with the RT Box, the board features four sliding switches and four LEDs.


Fig. 2.2 shows the top view of the board with a LaunchXL-F28069M attached.

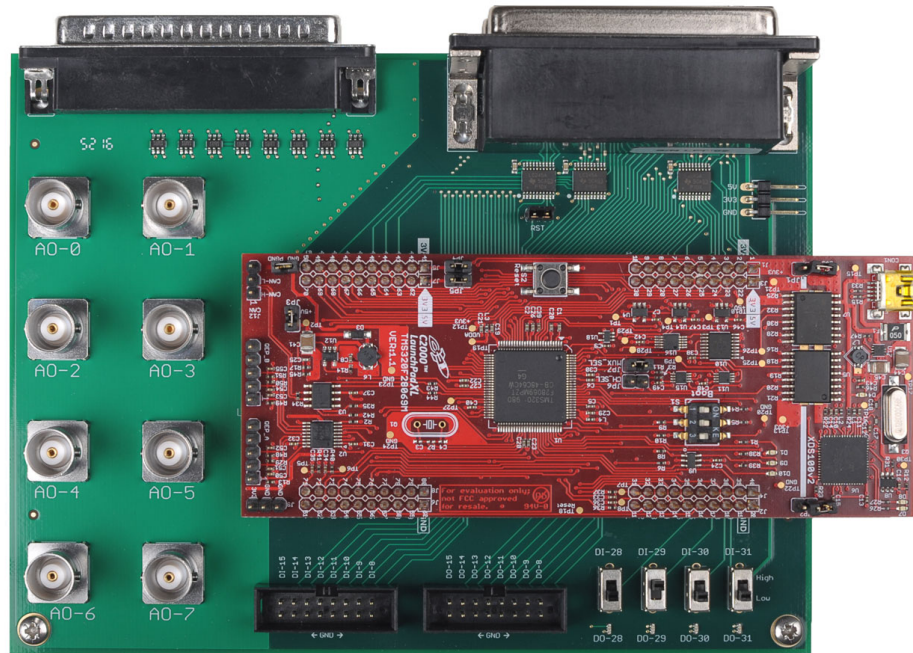

**Figure 2.2: RT Box LaunchPad Interface with LaunchXL-F28069M**



Fig. 2.3 shows the top view of the board with a LaunchXL-F28027 attached.

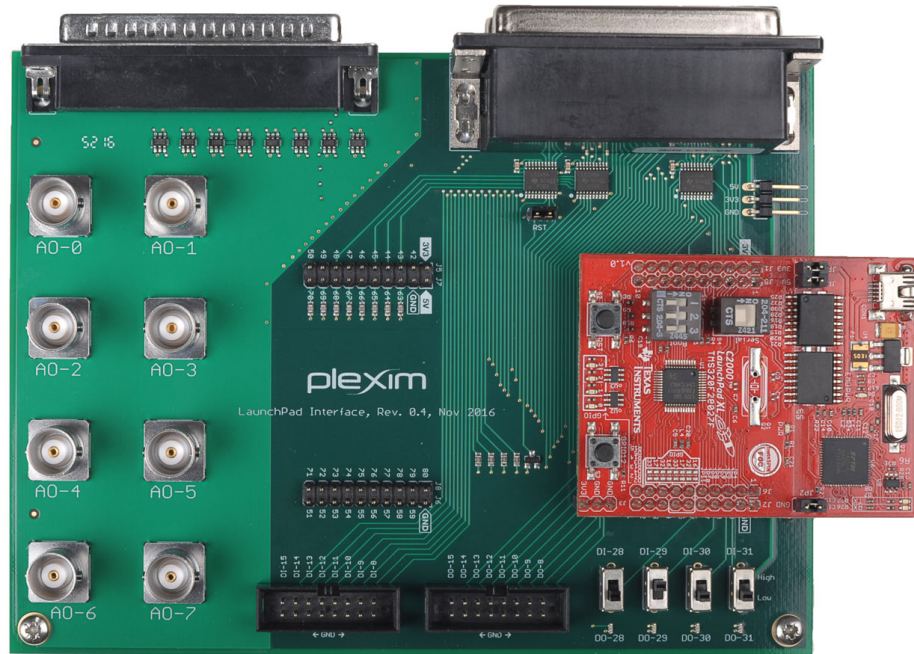

**Figure 2.3: RT Box LaunchPad Interface with LaunchXL-F28027**

## LaunchPad Headers

A TI C2000 LaunchPad can be attached to the interface board using the corresponding pin headers. The LaunchPad will extend beyond the edge of the interface board. Fig. 2.2 and 2.3 show the correct mounting position.

Tables 2.1 and 2.2 list the pin assignments of the LaunchPad headers and the RT Box signals. NC denotes no connection.

A more detailed table including the available processor functions at each pin for the supported LaunchPads can be found in the appendix.

RT Box	J1	J3	RT Box	RT Box	J4	J2	RT Box
+3.3 V	<b>1</b>	<b>21</b>	NC	DI-0	<b>40</b>	<b>20</b>	GND
NC	<b>2</b>	<b>22</b>	GND	DI-1	<b>39</b>	<b>19</b>	DI-6
DO-0	<b>3</b>	<b>23</b>	AO-0	DI-2	<b>38</b>	<b>18</b>	DI-7
DO-1	<b>4</b>	<b>24</b>	AO-1	DI-3	<b>37</b>	<b>17</b>	NC
DO-2	<b>5</b>	<b>25</b>	AO-2	DI-4	<b>36</b>	<b>16</b>	RESET (DO-25)
NC	<b>6</b>	<b>26</b>	AO-3	DI-5	<b>35</b>	<b>15</b>	DI-27
DI-24	<b>7</b>	<b>27</b>	AO-4	DO-4	<b>34</b>	<b>14</b>	DO-26
DI-25	<b>8</b>	<b>28</b>	AO-5	DO-5	<b>33</b>	<b>13</b>	DO-6
DI-26	<b>9</b>	<b>29</b>	AO-6	NC	<b>32</b>	<b>12</b>	DO-7
DO-27	<b>10</b>	<b>30</b>	AO-7	NC	<b>31</b>	<b>11</b>	DO-3

**Table 2.1: LaunchPad header pins - J1, J3, J4, J2**

## Onboard Voltage Supply

The LaunchPad board is powered from the interface board, no external power supply is required. The interface board contains a linear voltage regulator that converts the 5 V supplied by the RT Box down to 3.3 V as required.

The pins labeled 5 V at pin headers *J1* and *J5* of the interface board are supplied with 5 V generated by the TI launchpad. Therefore, a 5 V output at these pins is only available when a TI launchpad is present.

Both supply voltages 5 V and 3.3 V are accessible at a 3-pin header on the interface board if the user wants to power external circuits. The maximum load for both voltage levels combined is 1.5 A. When an external circuit requires a 5 V supply it is recommended to draw the required power from the 3-pin header on the interface board and not from the LaunchPad board, to minimize losses and component stress.

RT Box	J5	J7	RT Box	RT Box	J8	J6	RT Box
+3.3 V	<b>41</b>	<b>61</b>	NC	DI-16	<b>80</b>	<b>60</b>	GND
NC	<b>42</b>	<b>62</b>	GND	DI-17	<b>79</b>	<b>59</b>	DI-22
DO-16	<b>43</b>	<b>63</b>	AO-8	DI-18	<b>78</b>	<b>58</b>	DI-23
DO-17	<b>44</b>	<b>64</b>	AO-9	DI-19	<b>77</b>	<b>57</b>	NC
DO-18	<b>45</b>	<b>65</b>	AO-10	DI-20	<b>76</b>	<b>56</b>	NC
NC	<b>46</b>	<b>66</b>	AO-11	DI-21	<b>75</b>	<b>55</b>	DO-20
NC	<b>47</b>	<b>67</b>	AO-12	NC	<b>74</b>	<b>54</b>	DO-21
DO-19	<b>48</b>	<b>68</b>	AO-13	NC	<b>73</b>	<b>53</b>	DO-22
NC	<b>49</b>	<b>69</b>	AO-14	NC	<b>72</b>	<b>52</b>	DO-23
NC	<b>50</b>	<b>70</b>	AO-15	NC	<b>71</b>	<b>51</b>	DO-24

**Table 2.2: LaunchPad header pins - J5, J7, J8, J6**

## Analog Output

The interface board connects all 16 analog outputs from the RT Box to the LaunchPad headers. The lower 8 channels, AO-0...AO-7, are also accessible via the BNC connectors.

Each analog output channel is clamped to 0 V and 3.3 V with two Schottky diodes to protect the MCU inputs from overvoltage damage. Additionally, each channel is buffered with a 220 pF capacitor against ground.

## Digital I/O

Not all the digital inputs and outputs of the RT Box are connected to the LaunchPad headers. The unused digital inputs, DI-8...DI-15, and outputs, DO-8...DO-15, are freely accessible at the shrouded headers on the lower side of interface board. The digital outputs DO-28...DO-31 are connected to four orange LEDs in the lower right corner of the board. The digital inputs DI-28...DI-31 can be set via four sliding switches.

All other digital inputs and outputs from the RT Box are connected to the LaunchPad headers. To protect the inputs of the MCU from voltages greater than 3.3V, the corresponding outputs of the RT Box are buffered with bus transceivers.

DO-25 is connected to the MCU reset pin via the *RST* jumper. If the jumper is set, a low-level output at DO-25 will reset the MCU. Do not set this jumper unless you wish to use this feature.

## Connectors

The following table contains the part numbers of the connectors used on the LaunchPad interface board. For dimensions of the front panel of the RT Box, refer to the RT Box manual.

<b>Manufacturer</b>	<b>Part Number</b>	<b>Function</b>
Sullins	PRPC010DAAN-RC	20-pin LaunchPad headers
3M	961103-5604-AR	3-pin header to access 5V and 3.3V
Radiall	R141426161	BNC connector to access analog outs 0-7
On Shore Technology	302-S161	16-pin headers to access digital I/O 8-15
Assmann	A-DS 37 A/KG-T4S	37-pin DSUB to connect to RT Box Analog Out
Assmann	ASUB-277-37TP25	37-pin DSUB stacked to connect to RT Box Digital I/O

**Table 2.3: Connectors on the LaunchPad Interface**

# Appendix

The tables on the next pages provide more detailed information on the connectivity of the LaunchPad Interface. For each TI C2000 LaunchPad board, the RT Box I/O is shown beside the header pins, and the processor peripherals available at those pins. Note that not all peripherals are listed. Refer to the datasheet of the MCU board for a complete list of available peripherals. NC denotes no connection.

## LAUNCHXL-F280039C Pin Map

**Table 3.1: F280039C LaunchPad Pin Map - J1, J3**

MCU Function	RT Box	J1	J3	RT Box	MCU Function
3.3 V power supply	+3.3 V	<b>1</b>	<b>21</b>	NC	
	NC	<b>2</b>	<b>22</b>	GND	
GPIO28, SCIA_RX	DO-0	<b>3</b>	<b>23</b>	AO-0	ADCINA6
GPIO29, SCIA_TX	DO-1	<b>4</b>	<b>24</b>	AO-1	ADCINA2/B6/C9
	DO-2	<b>5</b>	<b>25</b>	AO-2	ADCINA3/B9/C7
	NC	<b>6</b>	<b>26</b>	AO-3	ADCINA14/B14/C4
GPIO9, EPWM5B, SPIA_CLK	DI-24	<b>7</b>	<b>27</b>	AO-4	ADCINA11/B10/C0
GPIO24, BOOT1	DI-25	<b>8</b>	<b>28</b>	AO-5	ADCINB12/C2
GPIO51, I2CB_SCL	DI-26	<b>9</b>	<b>29</b>	AO-6	ADCINA7/C3
GPIO34, I2CB_SDA	DO-27	<b>10</b>	<b>30</b>	AO-7	ADCINA1/B7

**Table 3.2: F280039C LaunchPad Pin Map - J5, J7**

MCU Function	RT Box	J5	J7	RT Box	MCU Function
3.3 V power supply	+3.3 V	<b>41</b>	<b>61</b>	NC	
	NC	<b>42</b>	<b>62</b>	GND	
GPIO15, SCIB_RX	DO-16	<b>43</b>	<b>63</b>	AO-8	ADCINB11
GPIO56, SCIB_TX	DO-17	<b>44</b>	<b>64</b>	AO-9	ADCINA10/B1/C10
	DO-18	<b>45</b>	<b>65</b>	AO-10	ADCINA5
	NC	<b>46</b>	<b>66</b>	AO-11	ADCINA4/B8
	NC	<b>47</b>	<b>67</b>	AO-12	ADCINB4/C8
GPIO4, CANA_TX	DO-19	<b>48</b>	<b>68</b>	AO-13	ADCINB5

**Table 3.2: F280039C LaunchPad Pin Map - J5, J7 (continued)**

MCU Function	RT Box	J5	J7	RT Box	MCU Function
	NC	<b>49</b>	<b>69</b>	AO-14	ADCINA12/C5
	NC	<b>50</b>	<b>70</b>	AO-15	ADCINA0/B15/C15, DACA_OUT

**Table 3.3: F280039C LaunchPad Pin Map - J4, J2**

MCU Function	RT Box	J4	J2	RT Box	MCU Function
GPIO0, PWM1A	DI-0	<b>40</b>	<b>20</b>	GND	
GPIO1, PWM1B	DI-1	<b>39</b>	<b>19</b>	DI-6	GPIO5, SPIA_STE, CANA_RX
GPIO2, PWM2A	DI-2	<b>38</b>	<b>18</b>	DI-7	GPIO32, BOOT2
GPIO3, PWM2B	DI-3	<b>37</b>	<b>17</b>	NC	
GPIO10, PWM6A	DI-4	<b>36</b>	<b>16</b>	DO-25	<b>RESET</b>
GPIO11, PWM6B	DI-5	<b>35</b>	<b>15</b>	DI-27	GPIO8, EPWM5A, SPIA_SIMO
GPIO33	DO-4	<b>34</b>	<b>14</b>	DO-26	GPIO17, SPIA_SOMI
GPIO48	DO-5	<b>33</b>	<b>13</b>	DO-6	GPIO37, EQEP1B
	NC	<b>32</b>	<b>12</b>	DO-7	GPIO22, LED5
	NC	<b>31</b>	<b>11</b>	DO-3	GPIO23, EQEP1I

**Table 3.4: F280039C LaunchPad Pin Map - J8, J6**

MCU Function	RT Box	J8	J6	RT Box	MCU Function
GPIO12, PWM7A	DI-16	<b>80</b>	<b>60</b>	GND	
GPIO13, PWM7B	DI-17	<b>79</b>	<b>59</b>	DI-22	GPIO27, SPIB_STE
GPIO6, PWM4A	DI-18	<b>78</b>	<b>58</b>	DI-23	GPIO47
GPIO7, PWM4B	DI-19	<b>77</b>	<b>57</b>	NC	

**Table 3.4: F280039C LaunchPad Pin Map - J8, J6 (continued)**

<b>MCU Function</b>	<b>RT Box</b>	<b>J8</b>	<b>J6</b>	<b>RT Box</b>	<b>MCU Function</b>
GPIO16, PWM5A	DI-20	<b>76</b>	<b>56</b>	NC	
GPIO35, PWM5B	DI-21	<b>75</b>	<b>55</b>	DO-20	GPIO60, SPIB_SIMO
	NC	<b>74</b>	<b>54</b>	DO-21	GPIO61, SPIB_SOMI
	NC	<b>73</b>	<b>53</b>	DO-22	GPIO20, LED4
	NC	<b>72</b>	<b>52</b>	DO-23	GPIO26
	NC	<b>71</b>	<b>51</b>	DO-24	GPIO25, EQEP1A



## LAUNCHXL-F280049C Pin Map

**Table 3.5: F280049C LaunchPad Pin Map - J1, J3**

MCU Function	RT Box	J1	J3	RT Box	MCU Function
3.3 V power supply	+3.3 V	<b>1</b>	<b>21</b>	NC	
	NC	<b>2</b>	<b>22</b>	GND	
GPIO13	DO-0	<b>3</b>	<b>23</b>	AO-0	ADCINA5
GPIO40	DO-1	<b>4</b>	<b>24</b>	AO-1	ADCINB0
	DO-2	<b>5</b>	<b>25</b>	AO-2	ADCINC2
	NC	<b>6</b>	<b>26</b>	AO-3	ADCINB1
GPIO56, SPICLKA	DI-24	<b>7</b>	<b>27</b>	AO-4	ADCINB2
ADCINC4	DI-25	<b>8</b>	<b>28</b>	AO-5	ADCINC0
GPIO37, EQEP1B	DI-26	<b>9</b>	<b>29</b>	AO-6	ADCINA9
GPIO35, EQEP1A	DO-27	<b>10</b>	<b>30</b>	AO-7	ADCINA1

**Table 3.6: F280049C LaunchPad Pin Map - J5, J7**

MCU Function	RT Box	J5	J7	RT Box	MCU Function
3.3 V power supply	+3.3 V	<b>41</b>	<b>61</b>	NC	
	NC	<b>42</b>	<b>62</b>	GND	
GPIO28, EQEP1A	DO-16	<b>43</b>	<b>63</b>	AO-8	ADCINA6
GPIO29, EQEP1B	DO-17	<b>44</b>	<b>64</b>	AO-9	ADCINB6
ADCINB4	DO-18	<b>45</b>	<b>65</b>	AO-10	ADCINC14
	NC	<b>46</b>	<b>66</b>	AO-11	ADCINC1
	NC	<b>47</b>	<b>67</b>	AO-12	ADCINC3
ADCINA8	DO-19	<b>48</b>	<b>68</b>	AO-13	ADCINC5

**Table 3.6: F280049C LaunchPad Pin Map - J5, J7 (continued)**

MCU Function	RT Box	J5	J7	RT Box	MCU Function
	NC	<b>49</b>	<b>69</b>	AO-14	ADCINA3
	NC	<b>50</b>	<b>70</b>	AO-15	ADCINA0

**Table 3.7: F280049C LaunchPad Pin Map - J4, J2**

MCU Function	RT Box	J4	J2	RT Box	MCU Function
GPIO10, EPWM6A, EQEP1A	DI-0	<b>40</b>	<b>20</b>	GND	
GPIO11, EPWM6B, EQEP1B	DI-1	<b>39</b>	<b>19</b>	DI-6	GPIO57, SPISTEA
GPIO8, EPWM5A	DI-2	<b>38</b>	<b>18</b>	DI-7	
GPIO9, EPWM5B, EQEP1I, OUTXBAR6	DI-3	<b>37</b>	<b>17</b>	NC	
GPIO4, EPWM3A	DI-4	<b>36</b>	<b>16</b>	DO-25	<b>RESET</b>
GPIO5, EPWM3B, OUTXBAR3	DI-5	<b>35</b>	<b>15</b>	DI-27	GPIO16, SPISIMOA
GPIO58, OUTXBAR1	DO-4	<b>34</b>	<b>14</b>	DO-26	GPIO17, SPISOMIA
GPIO30, OUTXBAR7	DO-5	<b>33</b>	<b>13</b>	DO-6	GPIO39
	NC	<b>32</b>	<b>12</b>	DO-7	GPIO23
	NC	<b>31</b>	<b>11</b>	DO-3	GPIO59, EQEP1I

**Table 3.8: F280049C LaunchPad Pin Map - J8, J6**

MCU Function	RT Box	J8	J6	RT Box	MCU Function
GPIO0, EPWM1A	DI-16	<b>80</b>	<b>60</b>	GND	
GPIO1, EPWM1B	DI-17	<b>79</b>	<b>59</b>	DI-22	GPIO27, SPISTEB
GPIO6, EPWM4A	DI-18	<b>78</b>	<b>58</b>	DI-23	

**Table 3.8: F280049C LaunchPad Pin Map - J8, J6 (continued)**

<b>MCU Function</b>	<b>RT Box</b>	<b>J8</b>	<b>J6</b>	<b>RT Box</b>	<b>MCU Function</b>
GPIO7, EPWM4B, OUTXBAR5	DI-19	<b>77</b>	<b>57</b>	NC	
GPIO2, EPWM2A	DI-20	<b>76</b>	<b>56</b>	NC	
GPIO3, EPWM2B, OUTXBAR2	DI-21	<b>75</b>	<b>55</b>	DO-20	GPIO24, SPISIMOB
	NC	<b>74</b>	<b>54</b>	DO-21	GPIO31, SPISOMIB
	NC	<b>73</b>	<b>53</b>	DO-22	GPIO33, SPISTEB
	NC	<b>72</b>	<b>52</b>	DO-23	GPIO34
	NC	<b>71</b>	<b>51</b>	DO-24	GPIO12

## LAUNCHXL-F28069M Pin Map

**Table 3.9: F28069M LaunchPad Pin Map - J1, J3**

MCU Function	RT Box	J1	J3	RT Box	MCU Function
3.3 V power supply	+3.3 V	<b>1</b>	<b>21</b>	NC	
	NC	<b>2</b>	<b>22</b>	GND	
J1.3	DO-0	<b>3</b>	<b>23</b>	AO-0	ADCINA7
J1.4	DO-1	<b>4</b>	<b>24</b>	AO-1	ADCINB1
GPIO12, TZ1, SPISIMOB	DO-2	<b>5</b>	<b>25</b>	AO-2	ADCINA2
	NC	<b>6</b>	<b>26</b>	AO-3	ADCINB2
GPIO18, SPICLKA	DI-24	<b>7</b>	<b>27</b>	AO-4	ADCINA0
GPIO22, EQEP1S	DI-25	<b>8</b>	<b>28</b>	AO-5	ADCINB0
GPIO33, EPWMSYNCO	DI-26	<b>9</b>	<b>29</b>	AO-6	ADCINA1
GPIO32, EPWMSYNCI	DO-27	<b>10</b>	<b>30</b>	AO-7	NC

**Table 3.10: F28069M LaunchPad Pin Map - J5, J7**

MCU Function	RT Box	J5	J7	RT Box	MCU Function
3.3 V power supply	+3.3 V	<b>41</b>	<b>61</b>	NC	
	NC	<b>42</b>	<b>62</b>	GND	
J7.3	DO-16	<b>43</b>	<b>63</b>	AO-8	ADCINB7
J7.4	DO-17	<b>44</b>	<b>64</b>	AO-9	ADCINB4
GPIO20, EQEP1A	DO-18	<b>45</b>	<b>65</b>	AO-10	ADCINA5
	NC	<b>46</b>	<b>66</b>	AO-11	ADCINB5
	NC	<b>47</b>	<b>67</b>	AO-12	ADCINA3
GPIO21, EQEP1B	DO-19	<b>48</b>	<b>68</b>	AO-13	ADCINB3

**Table 3.10: F28069M LaunchPad Pin Map - J5, J7 (continued)**

MCU Function	RT Box	J5	J7	RT Box	MCU Function
	NC	49	69	AO-14	ADCINA4
	NC	50	70	AO-15	NC

**Table 3.11: F28069M LaunchPad Pin Map - J4, J2**

MCU Function	RT Box	J4	J2	RT Box	MCU Function
GPIO0, EPWM1A	DI-0	40	20	GND	
GPIO1, EPWM1B	DI-1	39	19	DI-6	GPIO19, SPISTEA
GPIO2, EPWM2A	DI-2	38	18	DI-7	GPIO44, EPWM7B
GPIO3, EPWM2B, SPISOMIA	DI-3	37	17	NC	
GPIO4, EPWM3A	DI-4	36	16	DO-25	<b>RESET</b>
GPIO5, EPWM3B, SPISIMOA	DI-5	35	15	DI-27	GPIO16, SPISIMOA
GPIO13, TZ2, SPISOMIB	DO-4	34	14	DO-26	GPIO17, SPISOMIA, TZ3
NC	DO-5	33	13	DO-6	GPIO50, EQEP1A, TZ1
	NC	32	12	DO-7	GPIO51, EQEP1B, TZ2
	NC	31	11	DO-3	GPIO55, SPISOMIA, EQEP2B

**Table 3.12: F28069M LaunchPad Pin Map - J8, J6**

MCU Function	RT Box	J8	J6	RT Box	MCU Function
GPIO6, EPWM4A, EPWM-SYNCO	DI-16	80	60	GND	
GPIO7, EPWM4B	DI-17	79	59	DI-22	GPIO27, SPISTEB
GPIO8, EPWM5A, ADCSOCAO-	DI-18	78	58	DI-23	GPIO26, SPICLKB

**Table 3.12: F28069M LaunchPad Pin Map - J8, J6 (continued)**

<b>MCU Function</b>	<b>RT Box</b>	<b>J8</b>	<b>J6</b>	<b>RT Box</b>	<b>MCU Function</b>
GPIO9, EPWM5B	DI-19	<b>77</b>	<b>57</b>	NC	
GPIO10, EPWM6A, ADCSOCBO	DI-20	<b>76</b>	<b>56</b>	NC	
GPIO11, EPWM6B	DI-21	<b>75</b>	<b>55</b>	DO-20	GPIO24, EQEP2A
	NC	<b>74</b>	<b>54</b>	DO-21	GPIO25, EQEP2B
	NC	<b>73</b>	<b>53</b>	DO-22	GPIO52, EQEP1S, TZ3
	NC	<b>72</b>	<b>52</b>	DO-23	GPIO53, EQEP1I
	NC	<b>71</b>	<b>51</b>	DO-24	GPIO56, EQEP2I

## LAUNCHXL-F28377S Pin Map

**Table 3.13: F28377S LaunchPad Pin Map - J1, J3**

MCU Function	RT Box	J1	J3	RT Box	MCU Function
3.3 V power supply	+3.3 V	<b>1</b>	<b>21</b>	NC	
	NC	<b>2</b>	<b>22</b>	GND	
GPIO90	DO-0	<b>3</b>	<b>23</b>	AO-0	ADCIN14
GPIO89	DO-1	<b>4</b>	<b>24</b>	AO-1	ADCINB1
GPIO41	DO-2	<b>5</b>	<b>25</b>	AO-2	ADCINB4
	NC	<b>6</b>	<b>26</b>	AO-3	ADCINB2
GPIO60, SPICLKA, OUTXBAR3	DI-24	<b>7</b>	<b>27</b>	AO-4	ADCINA0
GPIO61, SPISTEA, OUTXBAR4	DI-25	<b>8</b>	<b>28</b>	AO-5	ADCINB0
GPIO43	DI-26	<b>9</b>	<b>29</b>	AO-6	ADCINA1
NC	DO-27	<b>10</b>	<b>30</b>	AO-7	NC

**Table 3.14: F28377S LaunchPad Pin Map - J5, J7**

MCU Function	RT Box	J5	J7	RT Box	MCU Function
3.3 V power supply	+3.3 V	<b>41</b>	<b>61</b>	NC	
	NC	<b>42</b>	<b>62</b>	GND	
GPIO87	DO-16	<b>43</b>	<b>63</b>	AO-8	ADCIN15
GPIO86	DO-17	<b>44</b>	<b>64</b>	AO-9	ADCINA2
NC	DO-18	<b>45</b>	<b>65</b>	AO-10	ADCINA5
	NC	<b>46</b>	<b>66</b>	AO-11	ADCINB5
	NC	<b>47</b>	<b>67</b>	AO-12	ADCINA3
NC	DO-19	<b>48</b>	<b>68</b>	AO-13	ADCINB3

**Table 3.14: F28377S LaunchPad Pin Map - J5, J7 (continued)**

<b>MCU Function</b>	<b>RT Box</b>	<b>J5</b>	<b>J7</b>	<b>RT Box</b>	<b>MCU Function</b>
	NC	<b>49</b>	<b>69</b>	AO-14	ADCINA4
	NC	<b>50</b>	<b>70</b>	AO-15	NC

**Table 3.15: F28377S LaunchPad Pin Map - J4, J2**

<b>MCU Function</b>	<b>RT Box</b>	<b>J4</b>	<b>J2</b>	<b>RT Box</b>	<b>MCU Function</b>
GPIO12, EPWM7A	DI-0	<b>40</b>	<b>20</b>	GND	
GPIO13, EPWM7B	DI-1	<b>39</b>	<b>19</b>	DI-6	GPIO4, EPWM3A, OUTXBAR3
GPIO14, EPWM8A, OUTXBAR3	DI-2	<b>38</b>	<b>18</b>	DI-7	GPIO62
GPIO15, EPWM8B, OUTXBAR4	DI-3	<b>37</b>	<b>17</b>	NC	
GPIO16, EPWM9A, SPISIMOA, OUTXBAR7	DI-4	<b>36</b>	<b>16</b>	DO-25	<b>RESET</b>
GPIO17, EPWM9B, OUTXBAR8	DI-5	<b>35</b>	<b>15</b>	DI-27	GPIO58, SPICLKB, OUTXBAR1, SPISIMOA
GPIO20, EQEP1A, SD1_D3	DO-4	<b>34</b>	<b>14</b>	DO-26	GPIO59, SD2_C2, SPISOMIA
GPIO21, EQEP1B, SD1_C3	DO-5	<b>33</b>	<b>13</b>	DO-6	GPIO72
	NC	<b>32</b>	<b>12</b>	DO-7	GPIO73
	NC	<b>31</b>	<b>11</b>	DO-3	GPIO78, EQEP2A

**Table 3.16: F28377S LaunchPad Pin Map - J8, J6**

<b>MCU Function</b>	<b>RT Box</b>	<b>J8</b>	<b>J6</b>	<b>RT Box</b>	<b>MCU Function</b>
GPIO2, EPWM2A, OUTXBAR1	DI-16	<b>80</b>	<b>60</b>	GND	
GPIO3, EPWM2B, OUTXBAR2	DI-17	<b>79</b>	<b>59</b>	DI-22	GPIO91
GPIO10, EPWM6A	DI-18	<b>78</b>	<b>58</b>	DI-23	NC



**Table 3.16: F28377S LaunchPad Pin Map - J8, J6 (continued)**

<b>MCU Function</b>	<b>RT Box</b>	<b>J8</b>	<b>J6</b>	<b>RT Box</b>	<b>MCU Function</b>
GPIO11, EPWM6B, OUTXBAR7	DI-19	<b>77</b>	<b>57</b>	NC	
GPIO18, SPICLKA, EPWM10A	DI-20	<b>76</b>	<b>56</b>	NC	
GPIO19, SPISTEA, EPWM10B	DI-21	<b>75</b>	<b>55</b>	DO-20	GPIO63, EQEP3B, SD2_C4
	NC	<b>74</b>	<b>54</b>	DO-21	GPIO64, EQEP3S, SPISOMIB
	NC	<b>73</b>	<b>53</b>	DO-22	GPIO99, EQEP1I
	NC	<b>72</b>	<b>52</b>	DO-23	GPIO92
	NC	<b>71</b>	<b>51</b>	DO-24	NC

## LAUNCHXL-F28379D Pin Map

**Table 3.17: F28379D LaunchPad Pin Map - J1, J3**

MCU Function	RT Box	J1	J3	RT Box	MCU Function
3.3 V power supply	+3.3 V	<b>1</b>	<b>21</b>	NC	
	NC	<b>2</b>	<b>22</b>	GND	
GPIO19, SD1_C2	DO-0	<b>3</b>	<b>23</b>	AO-0	ADCINA14, CMPIN4P
GPIO18, SD1_D2	DO-1	<b>4</b>	<b>24</b>	AO-1	ADCINC3, CMPIN6N
GPIO67	DO-2	<b>5</b>	<b>25</b>	AO-2	ADCINB3, CMPIN3N
	NC	<b>6</b>	<b>26</b>	AO-3	ADCINA3, CMPIN1N
GPIO60, SPICLKA, OUTXBAR3, SPISIMOB	DI-24	<b>7</b>	<b>27</b>	AO-4	ADCINC2, CMPIN6P
GPIO22, EPWM12A, SPICLKB	DI-25	<b>8</b>	<b>28</b>	AO-5	ADCINB2, CMPIN3P
GPIO105	DI-26	<b>9</b>	<b>29</b>	AO-6	ADCINA2, CMPIN1P
GPIO104, EQEP3A	DO-27	<b>10</b>	<b>30</b>	AO-7	ADCINA0

**Table 3.18: F28379D LaunchPad Pin Map - J5, J7**

MCU Function	RT Box	J5	J7	RT Box	MCU Function
3.3 V power supply	+3.3 V	<b>41</b>	<b>61</b>	NC	
	NC	<b>42</b>	<b>62</b>	GND	
GPIO139	DO-16	<b>43</b>	<b>63</b>	AO-8	ADCIN15, CMPIN4N
GPIO56, EQEP2S, SD2_D1	DO-17	<b>44</b>	<b>64</b>	AO-9	ADCINC5, CMPIN5N
GPIO97, EQEP1B	DO-18	<b>45</b>	<b>65</b>	AO-10	ADCINB5
	NC	<b>46</b>	<b>66</b>	AO-11	ADCINA5, CMPIN2N
	NC	<b>47</b>	<b>67</b>	AO-12	ADCINC4, CMPIN5P

**Table 3.18: F28379D LaunchPad Pin Map - J5, J7 (continued)**

MCU Function	RT Box	J5	J7	RT Box	MCU Function
GPIO52, EQEP1S, SD1_D3	DO-19	<b>48</b>	<b>68</b>	AO-13	ADCINB4
	NC	<b>49</b>	<b>69</b>	AO-14	ADCINA4, CMPIN2P
	NC	<b>50</b>	<b>70</b>	AO-15	ADCINA1

**Table 3.19: F28379D LaunchPad Pin Map - J4, J2**

MCU Function	RT Box	J4	J2	RT Box	MCU Function
GPIO0, EPWM1A	DI-0	<b>40</b>	<b>20</b>	GND	
GPIO1, EPWM1B	DI-1	<b>39</b>	<b>19</b>	DI-6	GPIO61, SPISTEA, OUTXBAR4
GPIO2, EPWM2A, OUTXBAR1	DI-2	<b>38</b>	<b>18</b>	DI-7	GPIO123
GPIO3, EPWM2B, OUTXBAR2	DI-3	<b>37</b>	<b>17</b>	NC	
GPIO4, EPWM3A, OUTXBAR3	DI-4	<b>36</b>	<b>16</b>	DO-25	<b>RESET</b>
GPIO5, EPWM3B, OUTXBAR3	DI-5	<b>35</b>	<b>15</b>	DI-27	GPIO58, SPICLKB, SPISIMOA, OUTXBAR1
GPIO24, EQEP2A, SD2_D1	DO-4	<b>34</b>	<b>14</b>	DO-26	GPIO59, SPISOMIA, SD2_C2
GPIO16, SD1_D1	DO-5	<b>33</b>	<b>13</b>	DO-6	GPIO124, SD1_D2
	NC	<b>32</b>	<b>12</b>	DO-7	GPIO125, SD1_C2
	NC	<b>31</b>	<b>11</b>	DO-3	GPIO29, EQEP3B, SD2_C3

**Table 3.20: F28379D LaunchPad Pin Map - J8, J6**

MCU Function	RT Box	J8	J6	RT Box	MCU Function
GPIO6, EPWM4A, OUTXBAR4	DI-16	<b>80</b>	<b>60</b>	GND	
GPIO7, EPWM4B, OUTXBAR5	DI-17	<b>79</b>	<b>59</b>	DI-22	GPIO66, SPISTEB

**Table 3.20: F28379D LaunchPad Pin Map - J8, J6 (continued)**

<b>MCU Function</b>	<b>RT Box</b>	<b>J8</b>	<b>J6</b>	<b>RT Box</b>	<b>MCU Function</b>
GPIO8, EPWM5A, ADCSOCAO-	DI-18	<b>78</b>	<b>58</b>	DI-23	GPIO131
GPIO9, EPWM5B, OUTXBAR6	DI-19	<b>77</b>	<b>57</b>	NC	
GPIO10, EPWM6A, ADCSOCBO	DI-20	<b>76</b>	<b>56</b>	NC	
GPIO11, EPWM6B, OUTXBAR 7	DI-21	<b>75</b>	<b>55</b>	DO-20	GPIO63, EQEP3B, SD2_C4
	NC	<b>74</b>	<b>54</b>	DO-21	GPIO64, EQEP3S, SPISOMIB
	NC	<b>73</b>	<b>53</b>	DO-22	GPIO26, EQEP2I, SD2_D2
	NC	<b>72</b>	<b>52</b>	DO-23	GPIO27, EQEP2S, SD2_C2
	NC	<b>71</b>	<b>51</b>	DO-24	GPIO25, EQEP2B, SPISOMIB, SD2_C1

## LAUNCHXL-F28027 Pin Map

**Table 3.21: F28027 LaunchPad Pin Map - J1, J3/J5**

MCU Function	RT Box	J1	J3/J5	RT Box	MCU Function
3.3 V power supply	+3.3V	<b>1</b>	<b>21/1</b>	NC	
	NC	<b>2</b>	<b>22/2</b>	GND	
GPIO28, TZ2	DO-0	<b>3</b>	<b>23/3</b>	AO-0	ADCINA7
GPIO29, TZ3	DO-1	<b>4</b>	<b>24/4</b>	AO-1	ADCINA3
GPIO34	DO-2	<b>5</b>	<b>25/5</b>	AO-2	ADCINA1
	NC	<b>6</b>	<b>26/6</b>	AO-3	ADCINA0
GPIO18, SPICLK	DI-24	<b>7</b>	<b>27/7</b>	AO-4	ADCINB1
	DI-25	<b>8</b>	<b>28/8</b>	AO-5	ADCINB3
	DI-26	<b>9</b>	<b>29/9</b>	AO-6	ADCINB7
	DO-27	<b>10</b>	<b>30/10</b>	AO-7	NC

**Table 3.22: F28027 LaunchPad Pin Map - J4/J6, J2/J2**

MCU Function	RT Box	J4/J6	J2/J2	RT Box	MCU Function
GPIO0, EPWM1A	DI-0	<b>40/1</b>	<b>20/1</b>	GND	
GPIO1, EPWM1B	DI-1	<b>39/2</b>	<b>19/2</b>	DI-6	GPIO19, SPISTEA
GPIO2, EPWM2A	DI-2	<b>38/3</b>	<b>18/3</b>	DI-7	GPIO12
GPIO3, EPWM2B	DI-3	<b>37/4</b>	<b>17/4</b>	NC	
GPIO4, EPWM3A	DI-4	<b>36/5</b>	<b>16/5</b>	DO-25	<b>RESET</b>
GPIO5, EPWM3B	DI-5	<b>35/6</b>	<b>15/6</b>	DI-27	GPIO16/32, SPISIMOA(16), ADCSOCA(32)
GPIO16/32, EPWMSYNCCI(32), TZ2(16)	DO-4	<b>34/7</b>	<b>14/7</b>	DO-26	GPIO17/33, SPISOMIA(17), TZ3(17)

**Table 3.22: F28027 LaunchPad Pin Map - J4/J6, J2/J2 (continued)**

<b>MCU Function</b>	<b>RT Box</b>	<b>J4/J6</b>	<b>J2/J2</b>	<b>RT Box</b>	<b>MCU Function</b>
GPIO17/33, SPISOMIA(17), TZ3(17)	DO-5	<b>33/8</b>	<b>13/8</b>	DO-6	GPIO6, EPWMSYNCI
	NC	<b>32/9</b>	<b>12/9</b>	DO-7	GPIO7
	NC	<b>31/10</b>	<b>11/10</b>	DO-3	NC



plexim  
electrical engineering software

---